

WM4201 Wi-Fi Phone

Quick Start Guide



Introduction

The WM4201 is a Wi-Fi (IEEE 802.11b/g) wireless phone that enables you to make Skype™ calls without using a computer. The phone enables you to use your normal Skype account with complete mobility, allowing you to talk from any location where you have an Internet connection through a nearby access point.

Package Checklist — The WM4201 Wi-Fi Phone package includes these items:

- One Wi-Fi Phone (WM4201)
- One Lithium-Ion battery
- One headset
- One mini USB cable
- One AC power charger
- This Quick Start Guide
- User Manual CD

Inform your dealer if there are any incorrect, missing or damaged items. If possible, retain the carton, including the original packing materials. Use them to repack the product in case there is a need to return it.

Getting Started — After unpacking the Wi-Fi Phone, you must install and charge the battery pack before turning on the phone. Just follow the steps in this guide.



Description

Before preparing the Wi-Fi Phone for use, first become familiar with its main keys, buttons, and other hardware features.

- 1. LCD Display** — Color software menu display.
- 2. Navigation Key** — Four-direction software navigation key. Pressing the key down selects the current option.
- 3. Right Soft Key** — Negative action key. Cancels or returns to previous menu.
- 4. End/Power Key** — Ends a call. Turns the power on and off. Press for two seconds to power on. Press two to four seconds for menu. Press for more than four seconds to power off.
- 5. Headset Jack** — Jack for headset connection.
- 6. USB/Power Charge Port** — Power charger connection for charging battery.
- 7. Alphanumeric Keypad** — Includes 0-9, A-Z, *, and # keys. The [a/A *] key selects upper- or lower-case characters, numbers, or hexadecimal. The [1] key selects common punctuation marks during text input. The [#] key selects special characters and symbols during text input
- 8. Send Key** — Calls a selected contact.
- 9. Left Soft Key** — Positive action key. Selects menu option.
- 10. Volume Button** — Adjusts volume of the speaker.

 
Keypad Lock — The phone keypad can be locked by pressing the Left Soft Key together with the [a/A *] key. Pressing the two keys again unlocks the keypad.

1. Install Battery

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Remove Battery Compartment Cover — Place the phone face down. Push and slide down the battery compartment cover until it becomes free.

Install Battery — Place the battery into the compartment. Be sure the text label on the battery is facing out and the battery's three metal contacts point to the top of the phone.

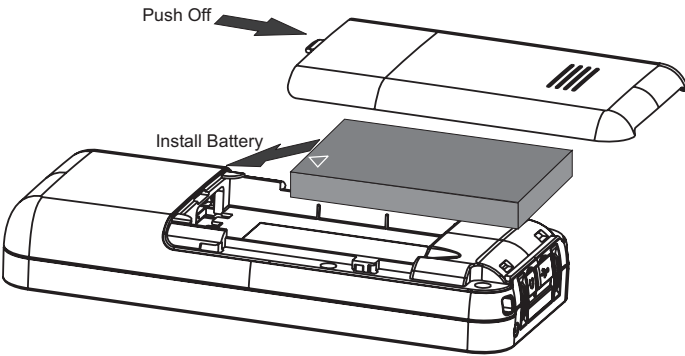

Replace Battery Compartment Cover — Slide the battery compartment cover back onto the phone until it clicks firmly into place.

 
2. Charge Battery

Connect Battery Charger — Lift up the rubber cover on the mini USB charger port and connect the power charger to the port. Then, plug the charger into an AC electrical outlet.

Fully Charge Battery — For the first time use, allow eight hours to fully charge the battery.

After the first-time charge, the battery requires only three hours to charge.


Note: The power charger automatically adjusts to any voltage between 100-240 volts at 50 or 60 Hz.

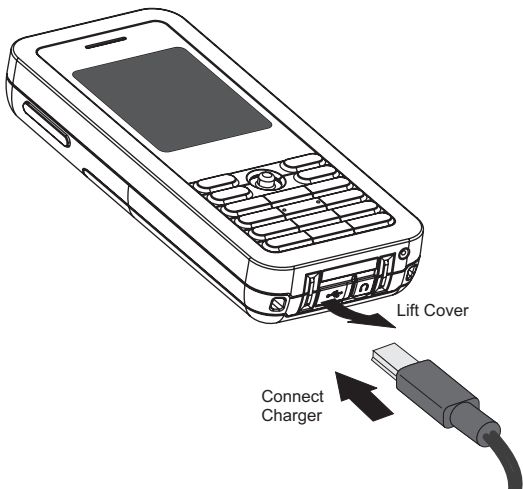

3. Power On Phone

Power On Phone — Push and hold down the End/Power key for more than two seconds to power on the phone.

 
Go to step 4 to learn how to make initial settings and start using the phone.

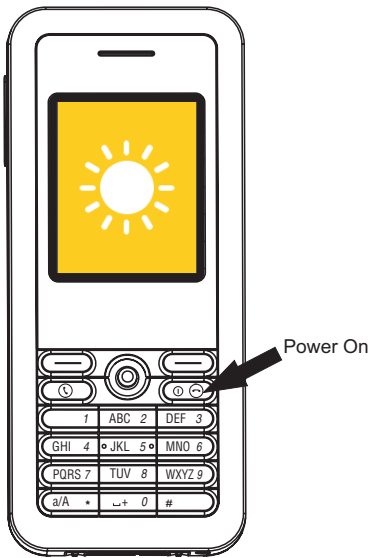


4. Make Initial Settings

After powering on the Wi-Fi Phone for the first time, perform the following procedure:

 1. Select the language of the display. The default is English.

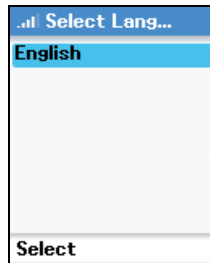


 2. Scroll down and read the entire Skype Agreement. Press the Left Soft Key to accept the Agreement.

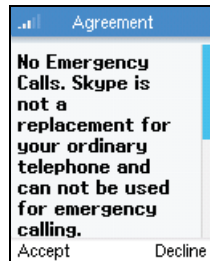


3. The phone searches for nearby access points and lists those that it finds.

 Normally, you need to be within 90 m (300 ft) of a network's wireless access point to be able to connect to it. If the network you want to connect to is not on the list, move to another location and try again.

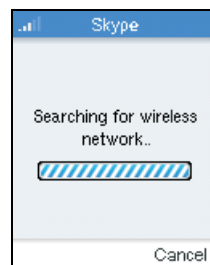

4. From the wireless networks list, select the wireless network that you want to connect to and press the Left Soft Key to access Options menu. Then select "Connect."

 
If a security key is required, the phone prompts for the key value. Security keys should be provided by the wireless network operator.

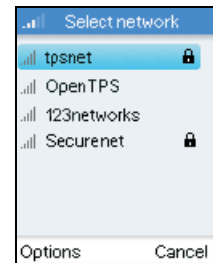

The access point information is stored in the phone's memory as a "Preferred Network" and will be used next time the phone is powered on.

5. If you already have a Skype account, sign in with your user name and password.

 
Note that if you are already signed in to your Skype account from your PC, you should sign out first before using the phone. You cannot sign in to your Skype account from two devices at the same time.

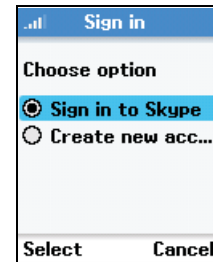

You can also create a new account using the phone.

When your Skype sign in is successful, you can start making calls. Your current list of contacts should display in the Contacts screen.


 
Note that large Contact lists may take a few minutes to download during an initial sign in.

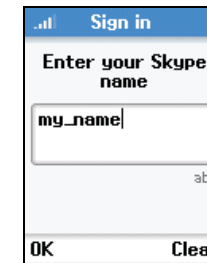

5. Make a Call


To make a Skype call, follow these steps:

  1. Be sure you have a valid network connection before making a call.
2. Press the Right Soft Key to select Contacts.
3. Use the Navigation key to scroll down and select the contact name you want to call.
4. Press the Send button to make the call.
5. When you have finished the call, press the End button.

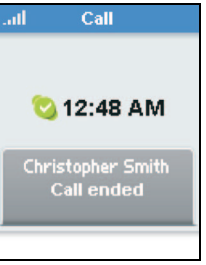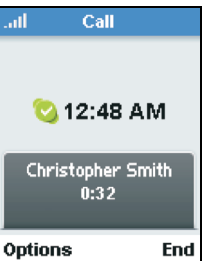

The Phone LCD Display

 The Wi-Fi Phone's color LCD display provides various status indicators and access to the menu-based interface. The illustration below shows the main screen and its elements.

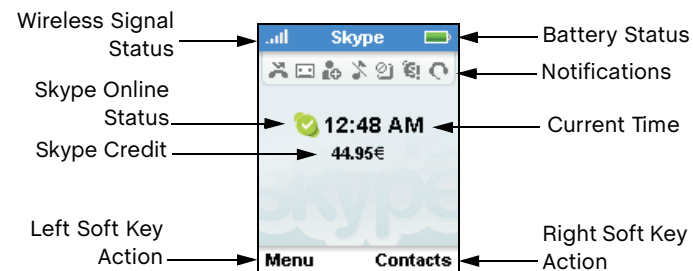








Battery Status — Indicates the status of the battery.

Wireless Signal Status — Indicates the strength of the Wi-Fi network signal.

Phone Notifications — The notification icons alert you of certain events and settings.

Skype Online Status — Indicates your current Skype online status. You can set your online status by using the Menu to select "Status" and then "Change status."

-  Online. The normal status when you are signed in to Skype.
-  Offline. When you are not signed in to Skype.

-  Do Not Disturb. You can set this status to indicate that you are busy.
-  Skype Me. Makes your Skype Name available for anyone to call.
-  Away. You can set this status to indicate that you are away.
-  Not Available. You can set this status to indicate that you are not available to answer calls.
-  Invisible. Indicates to others that you are offline, but you are still signed in to Skype and can make calls.

Current Time — The current time set on the phone. You can set the phone's time and date by using the Menu to select "Settings" and then "Time and Date."

 
Skype Credit — Your current Skype Credit balance.

Right Soft Key Action — The action that happens when you press the Right Soft Key. Typically, the Right Soft Key cancels the last action or returns to the previous menu. From the main screen, this provides access to your Contacts.

Left Soft Key Action — The action that happens when you press the Left Soft Key. Typically, the Left Soft Key selects the current menu item or confirms a setting. From the main screen, this provides access to the user menu.

The Main Menu


The main menu provides access to all your Skype and phone settings. The menus are easy to move through using the four-way Navigation key. Just move the Navigation key up or down to highlight a menu item, then push down on the key to select it.

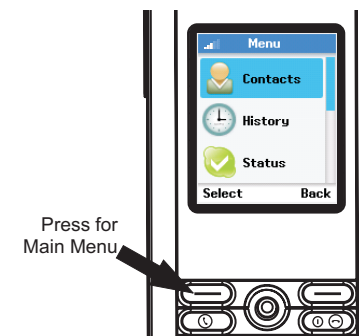

Menu	Description
Contacts	Your Contacts and their Skype status
History	Lists missed calls, incoming and outgoing calls, Voicemails, and detail requests
Status	Sets status and user profile, and signs out
Add Contact	Adds a Skype or SkypeOut number to your Contacts
Search	Searches for Skype contacts online
Services	Sets up Skype Credit, SkypeIn, and Skype Voicemail
Settings	Access to other phone settings

The Power Key Menu

 To access the Power Key menu, press the End/Power key for more than two seconds, but less than four, and then release it. The menu lists items depending on your current network connection and Skype sign in status.

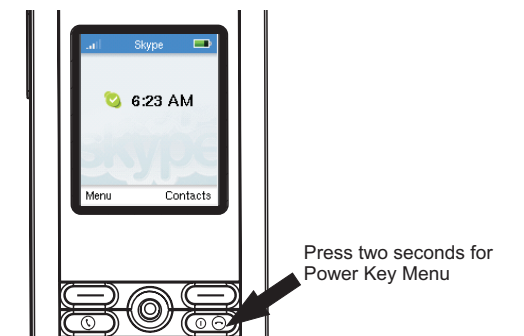

Menu	Description
Switch Off	Powers off the phone
Silent/Sounds On	Sets the ring tone volume to off/on
Change Status	Changes your Skype online status
My Profile	Change your Skype profile information
Sign In/Out	Signs in or out from Skype
Find/View Networks	Displays list of detected Wi-Fi networks
Network Details	Displays network connection information